




## How to Change the Regulator Part

1) The regulator is designed and tested before shipping out from manufacturer. It's at "ON" position. Please check if there's anything blocking inside the regulator. Once checking it out, make sure the direction of the gas inlet and gas outlet. Use wrench to install the regulator part;



2) Use wrench to install the regulator, screw in the regulator clockwise to make it tight. For taking of the original regulator please screw out the regulator counterclockwise.

3) Regulator is originally with NG use. Wrong Inlet installation will cause damage to Regular which is not under warranty.

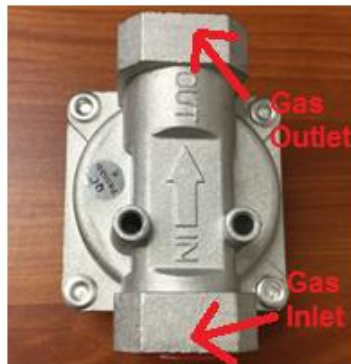

LP Position: Plastic Ring is away from the Cap



NG Position: Plastic Ring is next to the Cap